A.   AP1 Camera
B.   Camera Angle Cover
C.   Locking Screw Tool
D.   Alcohol wipe
E.   Clips
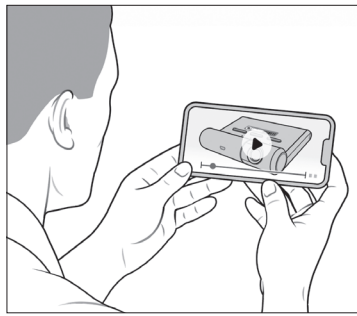F.   Cable

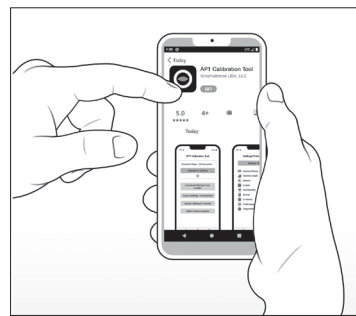Use the appropriate QR code to download the AP1 Calibration Tool

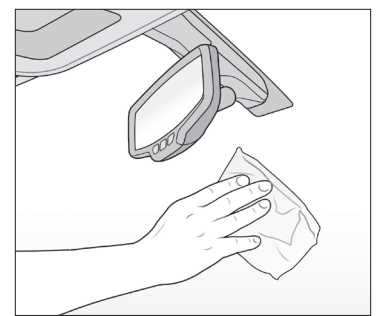**1.** Review the package contents.

**2.** Scan the QR code inside the box for a detailed installation video, spec sheet and user guide.
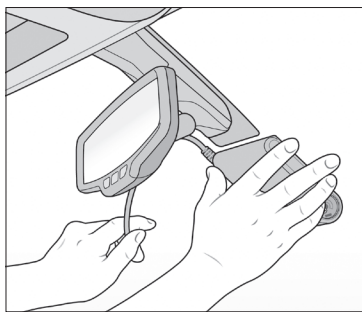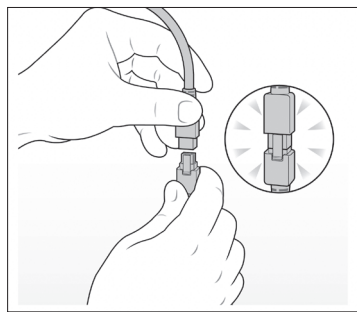
**3.** Watch the installation video.

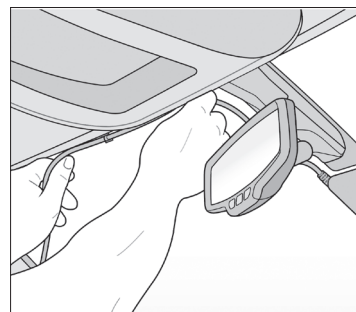**4.** Scan the QR code above to find and download the app.

**5.** Use included wipe on windshield surface. Allow time to dry.

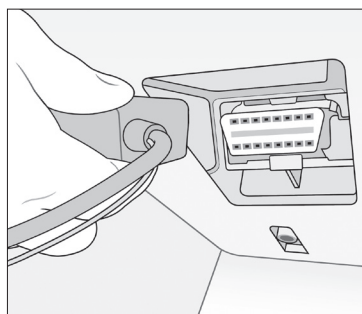**6.** Remove backing, then press and hold unit to window for 30 seconds.

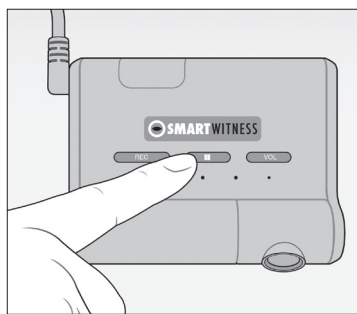**7.** Connect AP1 unit wire to main cable harness.

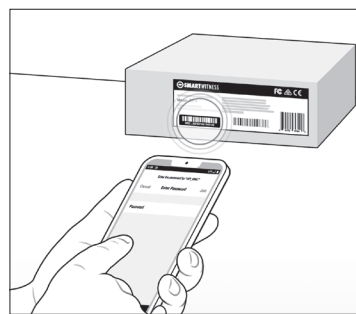**8.** Remove adhesive backing on clips, and adhere cable to windshield.

**9.** Tuck cable behind weather stripping, and push stripping in to secure it.
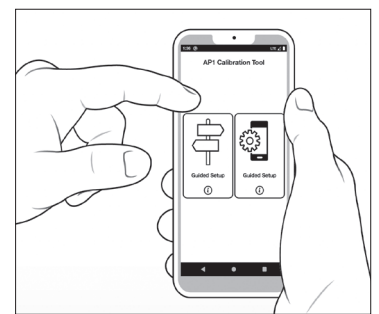
**10.** Plug main cable into your vehicle's OBDII (or J-BUS) port.

**11.** Hold center button on AP1 camera unit for 5 seconds. Release button, and wait 3 seconds for blinking orange light.
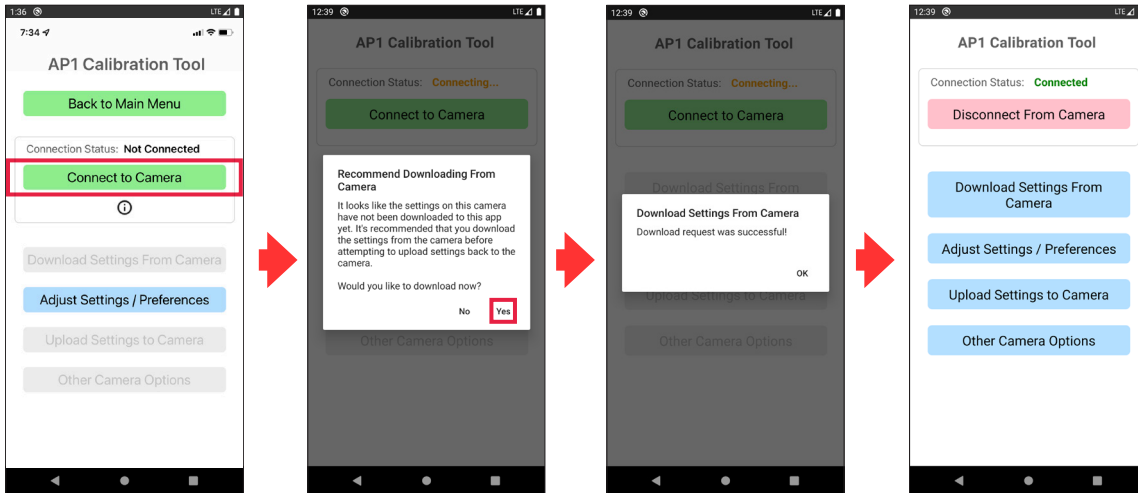
**12.** Select your device's Wi-Fi settings, choose AP1, and enter the last 8 digits of the IMEI code on the box's sticker.
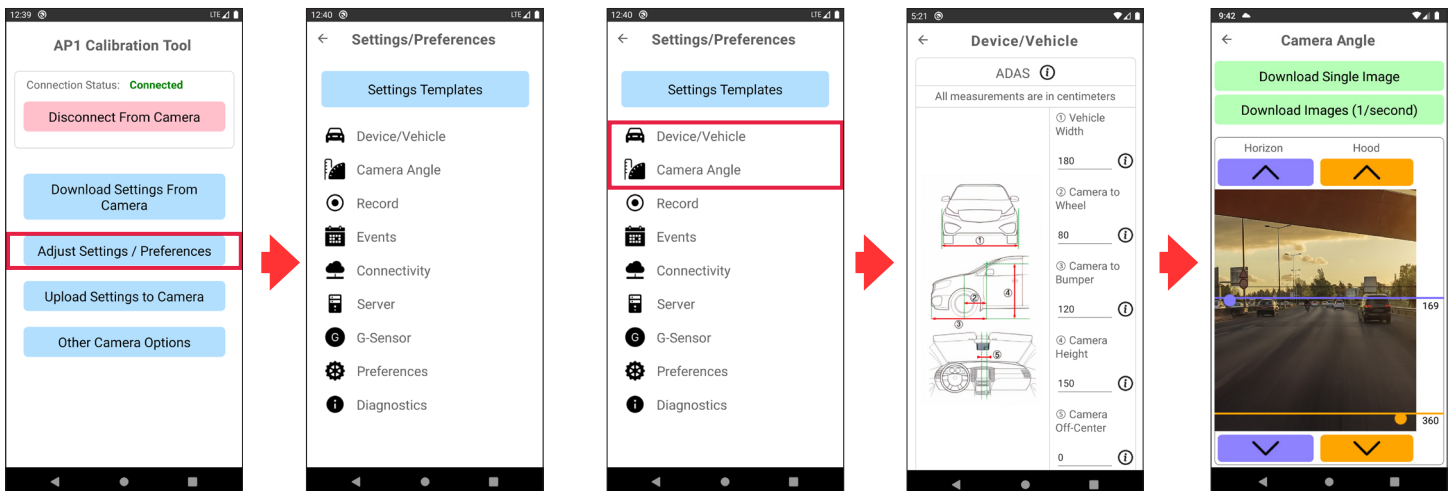
**13.** Open the AP1 Calibration Tool, and choose the manual option.

**14.** Tap the Connect to Camera option. If your device is connected through Wi-Fi to the camera properly, you will see "Connection Status: Connected." When prompted to Download Settings From Camera, tap Yes. If the download was successful, you'll see the Main Menu.
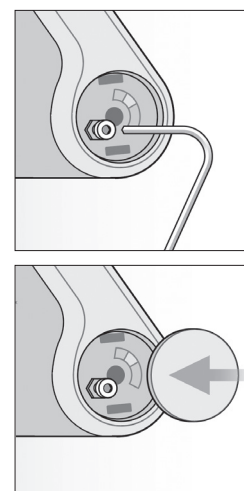
**15.** Tap the Adjust Settings/Preferences button to open the Settings page.

**16.** Rotate the camera on the AP1 to adjust its angle. If using ADAS, enter vehicle dimensions within the Device/Vehicle settings, as well as your hood and horizon lines in the Camera Angle settings.
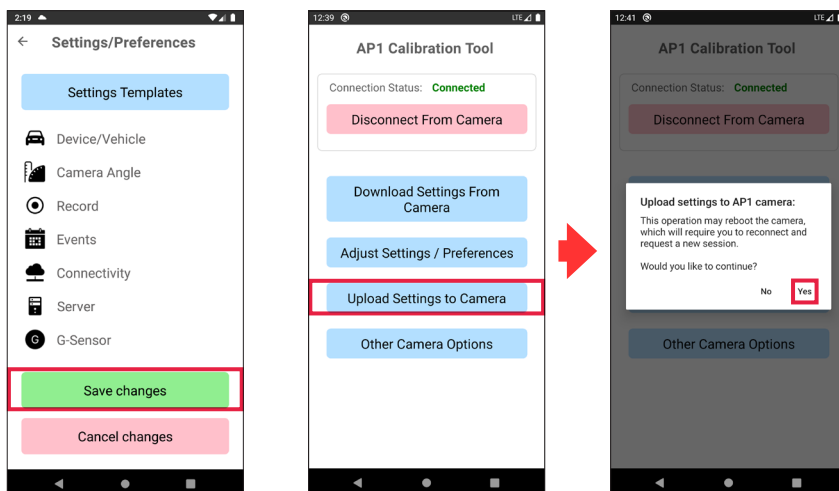
**17.** Tap Save Changes.

**18.** Select Upload Settings to Camera from the main page.

**19.** Tighten the camera angle lock screw, and attach the cover.

## Congratulations!
### Your AP1 is now ready to go!